


# Fitting Instructions for Trunk Release Kit (NA, NB & FL)

Art. Nr. NAB-6515



Remove the carpet cover from inside the boot by releasing the plastic pegs.


Install the actuator motor to the steel mounting plate.

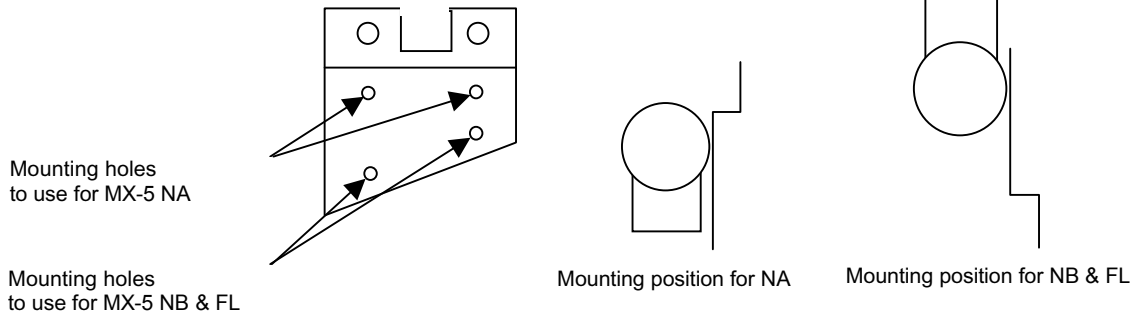

Unscrew the fixing nuts for the trunk key lock and mount the steel mounting plate and motor here.

Hook the steel operating rod through the motor and shorten it to the required length.


Connect the rod to the operating linkage on the catch by means of the adaptor (a).

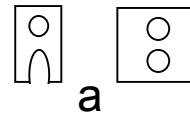

Mount the push button into the centre console by drilling a 16mm hole (you can place it inside the cubby box). The unit can now be wired up. (See Wiring Diagram I)

If you wish to operate the trunk release by means of a remote unit (eg an alarm) you will need to purchase a relay and follow the second wiring diagram. (See Wiring Diagram II)

## Wiring Diagram I

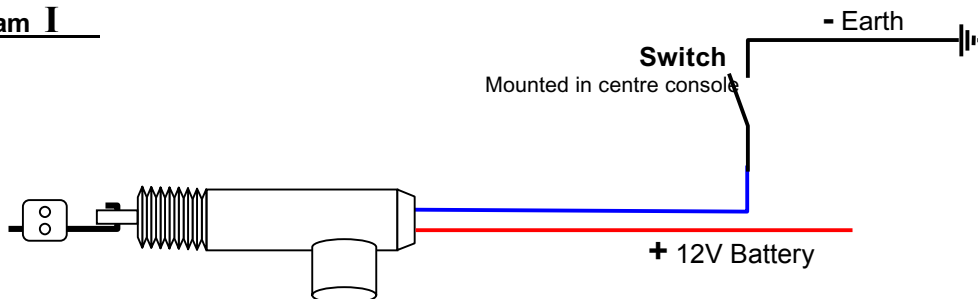

## Wiring Diagram II

