



Fitting Instructions for the FM Radio Band Expander (FM16)

Thank you for purchasing one of our Band Expanders. We hope that these instructions will answer any questions you may have.

As you can see, the unit comes with three wires. Two are obvious, they are the aerial connections, simply fit the aerial lead into the female plug, and push the male plug into the aerial socket on the back of the radio. The third wire is a power feed. Connect this to the 12v power feed for the radio.

Operation

The unit 'moves' the frequency received by the radio 'up' by 16Mhz, so in operation the radio display will show (for example) 82.4 but it will actually be receiving 98.4 (radio 1). If you wish to tune your radio manually, just subtract 16 from the frequency you want.

Scimitar International Ltd.
Unit 4, Cluster Industrial Estate
Rodney Road, Portsmouth
Hampshire, PO4 8ST
Tel: 0845 345 2384 Fax: 0845 345 2385
Website: <http://www.mx5parts.co.uk>

© Copyright 2002, Scimitar International Ltd.

These fitting instructions are supplied in good faith, and as a guide only. We accept no responsibility or liability for any damages, injury or loss caused as a result of following these instructions. Your statutory rights are not affected.



Fitting Instructions for the FM Radio Band Expander (FM16)

Thank you for purchasing one of our Band Expanders. We hope that these instructions will answer any questions you may have.

As you can see, the unit comes with three wires. Two are obvious, they are the aerial connections, simply fit the aerial lead into the female plug, and push the male plug into the aerial socket on the back of the radio. The third wire is a power feed. Connect this to the 12v power feed for the radio.

Operation

The unit 'moves' the frequency received by the radio 'up' by 16Mhz, so in operation the radio display will show (for example) 82.4 but it will actually be receiving 98.4 (radio 1). If you wish to tune your radio manually, just subtract 16 from the frequency you want.

Scimitar International Ltd.
Unit 4, Cluster Industrial Estate
Rodney Road, Portsmouth
Hampshire, PO4 8ST
Tel: 0845 345 2384 Fax: 0845 345 2385
Website: <http://www.mx5parts.co.uk>

© Copyright 2002, Scimitar International Ltd.

These fitting instructions are supplied in good faith, and as a guide only. We accept no responsibility or liability for any damages, injury or loss caused as a result of following these instructions. Your statutory rights are not affected.