




# Carpet Mat Fitting Instructions

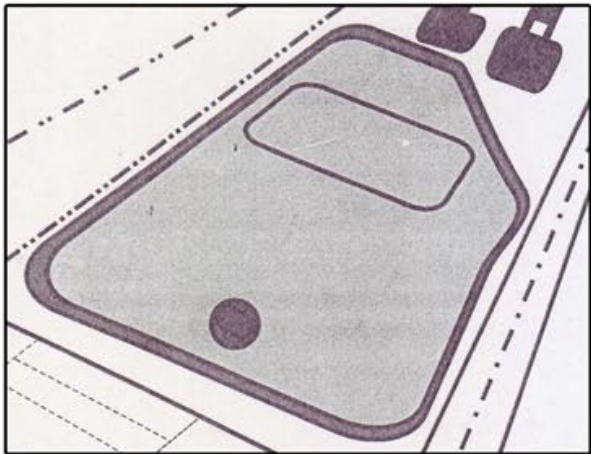


**Place drivers side mat in the correct position**

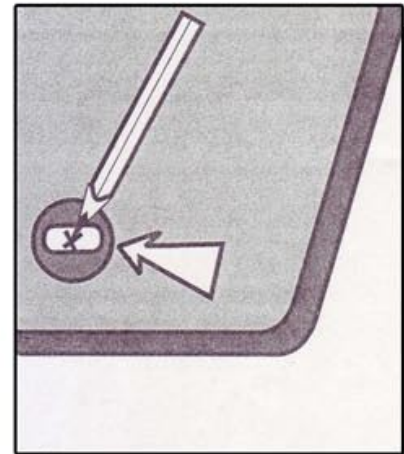


**Mark Centre of eyelit with a pen or pencil**

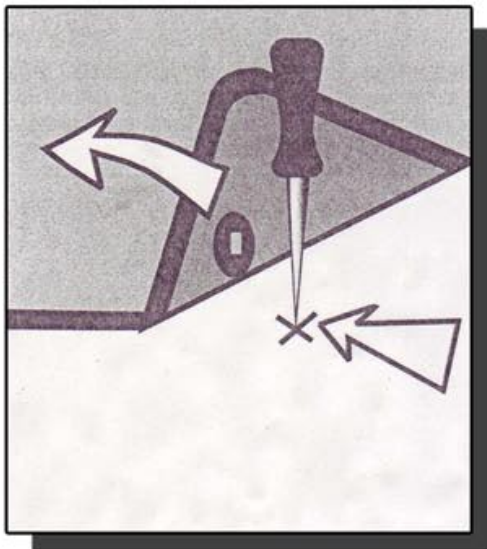


**Use a bradawl or sharp point to make a small hole**

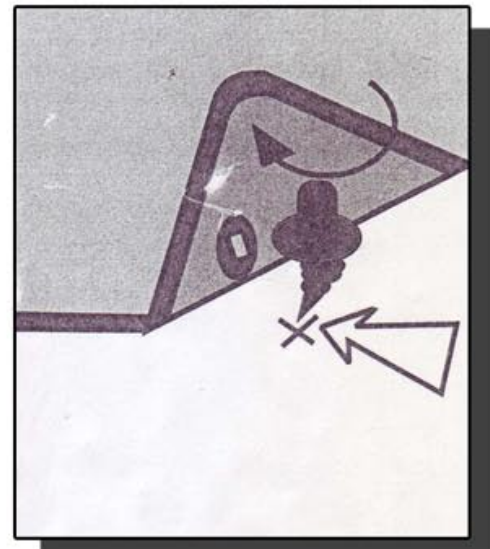

**Screw the retaining clip into position**

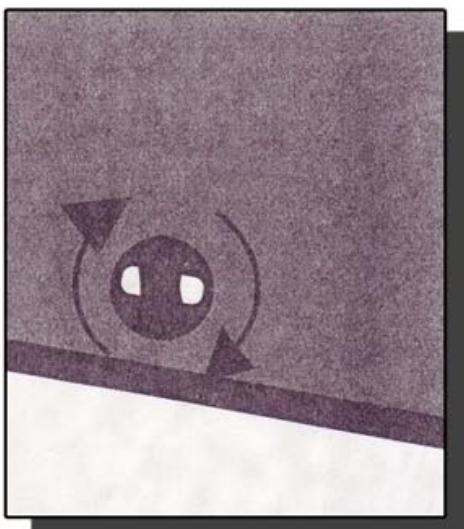

**Lay the mat down over the clip and twist the top**

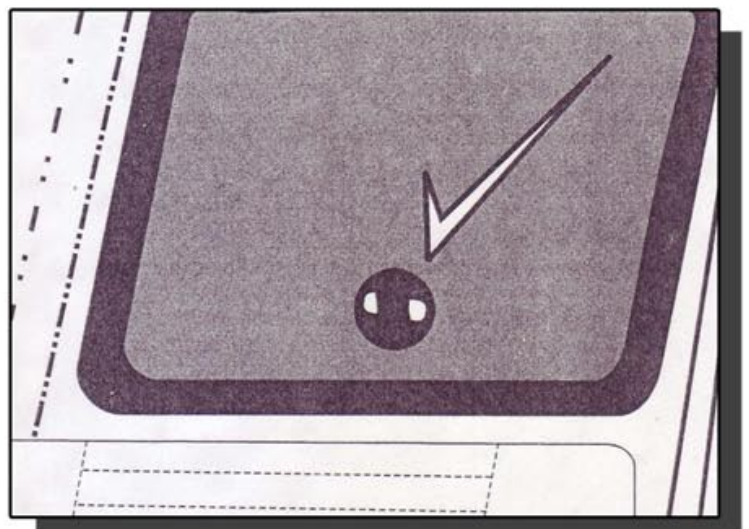

**Job done!**