



GENUINE ACCESSORIES


INSTALLATION INSTRUCTIONS

PART NUMBER:
0000-8R-D02-B;0000-89-D02C;
N101-V4-640

ALUMINUM FUEL DOOR™

APPLICABLE MODELS:
1999→ MIATA

PACKAGE CONTENTS

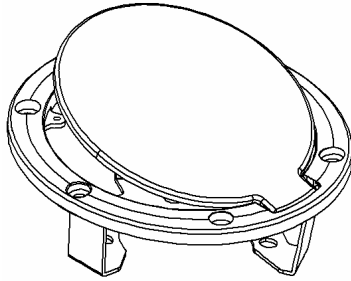


FUEL DOOR ASSEMBLY (QTY.1)


PREMIUM RECOMMENDED
SUPER RECOMMANDE

PREMIUM FUEL STICKER (QTY.1)

TOOLS REQUIRED



8MM NUT DRIVER

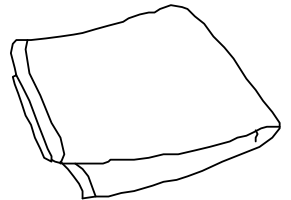


CLEAN RAG

0 BEFORE INSTALLATION

- 1) READ ENTIRE INSTRUCTIONS BEFORE PROCEEDING.
- 2) APPLY PREMIUM FUEL STICKER TO MODELS OF 2001 AND UP. DO NOT APPLY TO EARLIER MODELS. APPLY STICKER TO UNDERSIDE OF FUEL DOOR.
- 3) CLEAN INSTALLATION AREA.
- 4) WORK IN WELL VENTILATED AREA
- 5) TAKE CARE NOT TO DROP ANY BOLTS INTO FUEL FILLER PIPE DURING INSTALLATION.
- 6) BE CAREFUL NOT TO SCRATCH PAINT.


2 REMOVE STOCK FUEL DOOR

WITH 8mm SOCKET DRIVER REMOVE THE TWO MOUNTING BOLTS AT THE BASE OF THE FUEL DOOR HINGE AND CAREFULLY REMOVE THE FUEL DOOR. PLACE STOCK FUEL DOOR AND MOUNTING BOLTS ON CLEAN RAG.

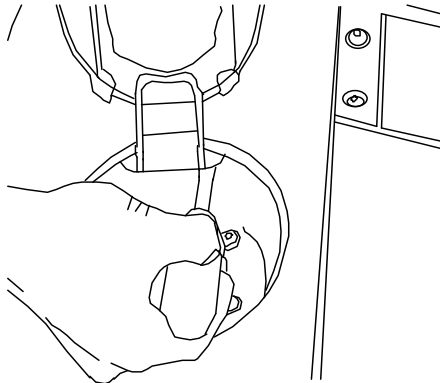

1 REMOVE FUEL FILLER CAP


OPEN STOCK FUEL DOOR AND UNSCREW FUEL FILLER CAP. REMOVE TETHER WITH FINGERS AS SHOWN IN ILLUSTRATION. (NOTE THE POSITION AND ORIENTATION OF TETHER RETAINING RING FOR LATER REPLACEMENT. PLACE CAP AND TETHER ON CLEAN RAG.

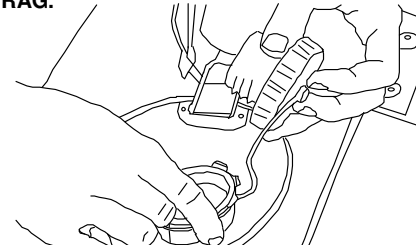

PLACE CLEAN RAG IN FILLER NECK OPENING TO PREVENT BOLTS/DEBRIS FROM ENTERING.


3 REMOVE FUEL FILLER BOLTS

WITH 8mm SOCKET DRIVER REMOVE THREE OF THE FOUR BOLTS SURROUNDING THE FUEL FILLER PIPE. (REMOVE ONLY THE BOLTS REPRESENTED BY DARK CIRCLES IN ILLUSTRATION). PLACE ON CLEAN RAG.

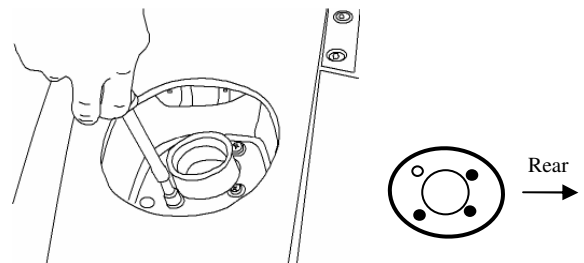


4 POSITION ALUMINUM FUEL DOOR

PLACE THE ALUMINUM FUEL DOOR ONTO VEHICLE BODY ALIGNING THE THREE BOLT HOLES ON BODY PANEL WITH THE THREE CORRESPONDING HOLES ON FUEL DOOR BRACKET.

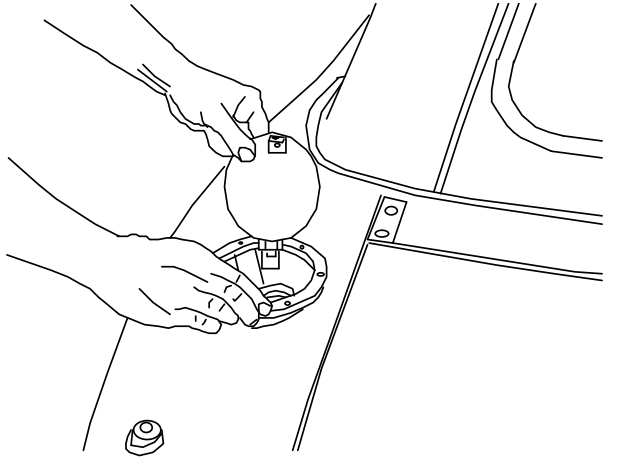


5 REPLACE SCREWS

MOUNT THE ALUMINUM FUEL DOOR BY REPLACING THE THREE SCREWS THAT WERE REMOVED IN STEP THREE. TORQUE EACH BOLT TO 25 IN/LB.

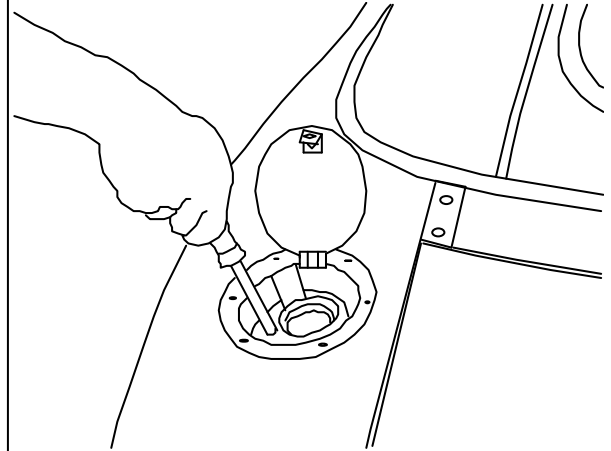

6 REPLACE TETHER

REPLACE THE TETHER AND FUEL DOOR CAP BY PUSHING FUEL DOOR TETHER RING OVER FUEL FILLER PIPE. MAKE SURE PLASTIC TABS ON TETHER RING POINT UPWARD AND ARE POSITIONED ON THE TRUNK SIDE OF FILLER PIPE.

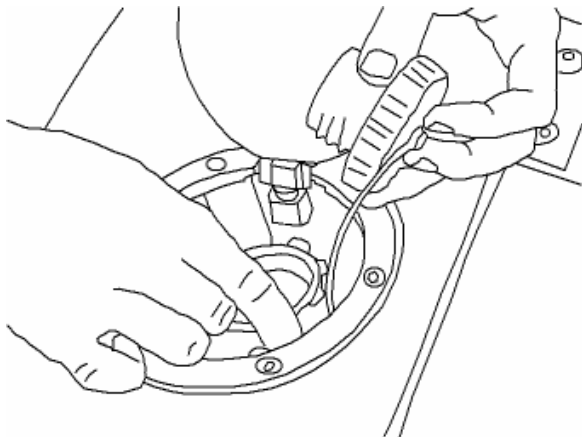

7 STICKER APPLICATION

- 1) ASSURE THAT PREMIUM FUEL STICKER HAS BEEN APPLIED FOR MODELS OF 2001 AND UP ONLY. **NOT FOR EARLIER MODELS.**

8 AFTER INSTALLATION

- 1) CLOSE FUEL DOOR AND OPEN TO ASSURE LOCKING MECHANISM ENGAGES.
- 2) CHECK THAT FUEL FILLER BOLTS ARE TORQUE TO 25 IN/LB.
- 3) ASSURE FUEL CAP IS REPLACED AND TIGHT.
- 4) SAVE STOCK FUEL DOOR AND BOLTS.
- 5) WIPE AREA CLEAN WITH A SOFT TOWEL.