


Larger Battery Tray Fitting Instructions

- 1) Disconnect your original battery from both the positive and negative terminals.
- 2) Unscrew the nut from the "J" bolt and remove the top clamp, noting which hole it was hooked into in the body. Keep the 10mm nut as you will need this to re-fit the new one.
- 3) Remove the battery and the original plastic tray.
- 4) Unbolt the "L" shaped clamp that the "J" bolt hooked into, turn it round and bolt it back in so it looks like this –




- 5) Next, unbolt the bracket that fitted around the edge of the battery tray.
- 6) In all Mk1 models there are a second set of holes for this bracket to bolt into. Normally these are hidden under some cloth tape. Using the photo below, locate these holes and uncover them.

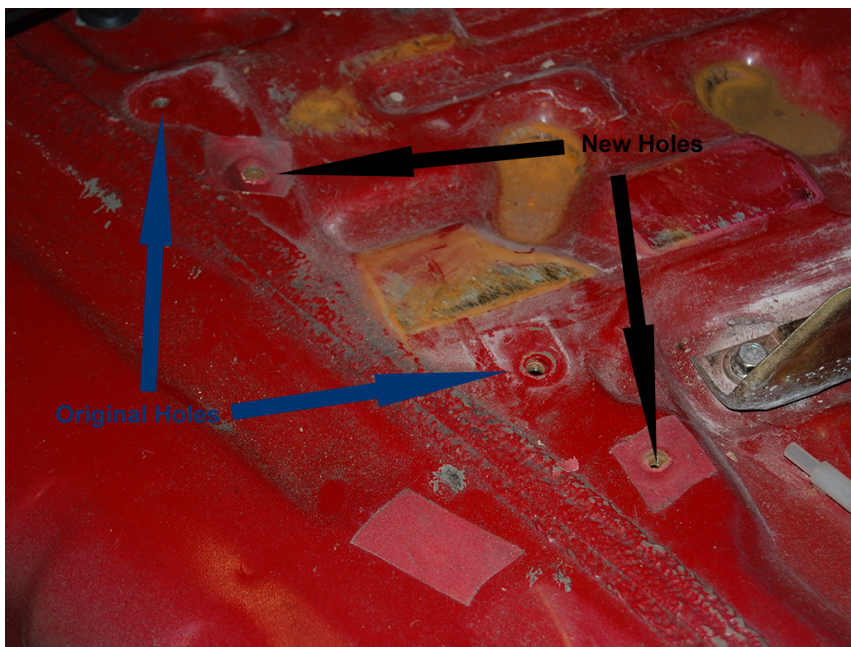

- 7) Once you have dropped in the new larger plastic tray and bolted the bracket into the newly discovered holes, it should look like this –



- 8) Place the new larger battery in the tray and making sure you are using the larger clamp and longer “J” bolt supplied in the kit, hook the top clamp in the hole above where the old clamp came out of and re-fit the bolt using the nut you saved from the old one.

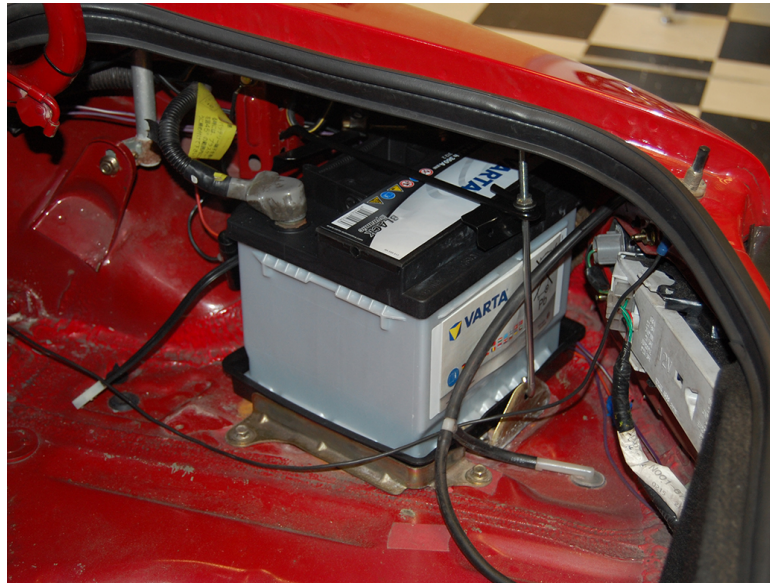

- 9) Reconnect the vent tubes and the battery terminals.
10) Finally, make a brew, stand back, and admire your handy work!

Disclaimer: Scimitar International Ltd take no responsibility what-so-ever for any damage caused or injury sustained from following these instructions. They are intended as a guide only, and it is your responsibility to ensure that the work is carried out to an adequate standard. If you are unsure in any way, please consult a professional for advice. This disclaimer does not affect your statutory rights.